

**Chapter 1 : WHIRLPOOL Quiet Partner III**

*Dishwasher Features Your Whirlpool dishwasher may have some or all of these features. TargetClean<sup>®</sup>,<sup>®</sup> Wash Area Cup shelves The TargetClean<sup>®</sup>,<sup>®</sup> wash area is located at the back of the lower level rack. NOTE: You must select the TargetClean<sup>®</sup>,<sup>®</sup> wash option to use this feature.*

Page 5 Quick Steps 1 Prepare and load dishwasher. Spin the spray arms. They should turn freely. Push door firmly closed. The door latches automatically. Remove leftover food, bones, toothpicks and other hard items from the dishes. Remove labels from containers before washing. If you do not plan to run a wash cycle soon, run a rinse cycle. Do not use detergent. Add powder, liquid or tablet detergent just before starting a cycle. For most water conditions, the factory setting will give good results. If you have hard water or notice rings or spots, try a higher setting. Turn the arrow adjuster inside the dispenser by either using your fingers or -inserting a flat-blade screwdriver into the center of the arrow and turning.

Page 8 Cycle and Option Descriptions This information covers several different models. Your dishwasher may not have all of the cycles and options described. Estimated cycle times may increase or decrease depending on water temperature, soil conditions, dish load size, and options selected. You can customize your cycle by selecting an option. If you change your mind, press the option again to turn off the option, or select a different option. This option, with the use of rinse aid, will provide the best drying performance. Plastic items are less likely to deform when loaded in the top rack.

Page 10 Dishwasher Features Your Whirlpool dishwasher may have some or all of these features. Adjusters are located on each side of the top rack. To raise or lower the rack with adjuster 1, hold the top rack with one hand near the adjuster and use the other hand to pull out the top of the adjuster. Raise or lower the rack to one of the preset positions. To raise the rack with adjuster 2, lift and pull up. To lower the rack, lift up and let down.

Page 12 Filtration System Your dishwasher has the latest technology in dishwasher filtration. This triple filtration system minimizes sound and optimizes water and energy conservation while providing superior cleaning performance. Throughout the life of your dishwasher, the filter will require maintenance to sustain peak cleaning performance. The triple filter system consists of 2 parts, an upper filter assembly and a lower filter.

Page 13 Filter Reinstallation Instructions 3. Slowly rotate the filter clockwise until it drops into place. Continue to rotate until the filter is locked into place. If the filter is not fully seated still turns freely, continue to turn the filter clockwise until it drops and locks into place. The Upper Filter Assembly arrow does not have to align with the arrow in the Lower Filter as long as the filter is locked.

Page 14 Troubleshooting First try the solutions suggested here. If you need further assistance or more recommendations that may help you avoid a service call, refer to the warranty page in this manual and scan the code with your mobile device, or visit [www.whirlpool.com](http://www.whirlpool.com). In Canada, visit [www.whirlpool.ca](http://www.whirlpool.ca). Contact us by mail with any questions or concerns at the address below: Reload to keep items from interfering with spray jets or spray arm. White spots on cookware with nonstick finish Has the dishwasher detergent removed cookware seasoning? Reseason cookware after washing it in the dishwasher. Check and clean your filters regularly. If you have some items with heavier soils, use a heavier cycle. Is the water temperature too low? Please have the following information available when you call the Customer eXperience Center: Esta lavavajillas limpia rociando la vajilla con agua y hace pausas para permitir que el detergente remoje la vajilla y afloje la suciedad de los platos.

## Chapter 2 : Whirlpool Dishwasher Repair Manual | Troubleshooting Problems

*Hi, I have a Whirlpool Gold Quiet partner III dishwasher that does not cycle through to the drain and dry cycle, I have to manually hit the stop/drain button at when the cleaning cycle is done. Any su .*

Most issues that occur with the Silent Partner 1 are the result of user error and are easy to fix. Before you attempt extensive repairs yourself, know the status of your warranty. Certain parts of the machine carry a full year warranty that could be automatically voided by unauthorized repairs, so contact a repair center if you have any doubt. Replace any that are blown. Step 2 Make sure the dishwasher is securely closed and plugged in. If it does not close securely, replace the door latch, located beneath the control panel. Step 3 Follow the wiring that runs from the house to the dishwasher. If it is burnt, replace it. If the wiring is fine, replace the timer and selection switch, both located under the control panel. Remove the silverware basket and door liner for easy access. Improper loading is the number one cause of bad cleaning. Be sure to put detergent in both cups and use a rinse-aid solution in the designated receptacle. If you keep the silverware basket in the bottom rack, try installing it in the designated holder on the door. This may allow more water to circulate, and will make the rack less crowded. Step 2 Increase the water temperature on your water heater. Step 3 Remove the bottom rack and locate the drain filter. Manually remove any debris or clogs. Inspect the spray arms to make sure the holes are not clogged. Use a toothpick to clear debris. Locate the float switch near the bottom of the inside of the tub. Make sure it can move easily. If it cannot, or if it is broken, replace it. Step 4 Locate the drain valve, where the drain hose attaches to the machine. Remove the hose and check the valve for clogs. Leaking or Retaining Water Step 1 Check all seals and gaskets for signs of wear or cracking. This can cause water to leak out the front. Step 2 Unplug the dishwasher and inspect all water lines, both inlet and drain, for kinks, holes, cracks or loose connections. Replace or tighten as necessary. Do not leave excess hose length inside the machine because it may touch the heating element, which will melt a hole in the hose and cause a leak. This is a common problem with Silent Partner 1 dishwashers. Check the valves where the hoses attach. If they are loose, replace the entire valve. If the machine still leaks, contact a repair center. Step 3 Inspect all belts for signs of wear, including fraying, cracking or breaking and replace as necessary. If the motor hums but does not turn, replace it. If your dishwasher still retains water, replace the pump.

## Chapter 3 : Whirlpool Dishwasher quiet partner II user manual | theinnatdunvilla.com

*Browse dishwashers from Whirlpool to find the right one to care for your family's mealtime messes.*

## Chapter 4 : WHIRLPOOL DISHWASHER USER MANUAL Pdf Download.

*No owner manuals found for "whirlpool quiet partner ii dishwasher" Please type the product type, make and model to search for owner manuals.*

## Chapter 5 : WHIRLPOOL GUXTVY MANUAL Pdf Download.

*Whirlpool brand dishwashers offer many levels of quiet operation with this system of sound-reducing insulation. ENERGY STAR® Qualified Whirlpool® dishwashers exceed government efficiency standards, so they are better for the environment and your wallet.*

## Chapter 6 : Whirlpool Gold Quiet Partner III GUXTPS3

*Free kitchen appliance user manuals, instructions, and product support information. Find owners guides and pdf support documentation for blenders, coffee makers, juicers and more.*

**Chapter 7 : Whirlpool model DUPWKQ0 dishwasher genuine parts**

*I have a portable dishwasher whirlpool quiet partner II. Model DPPWKQ1. Serial #FR Type No. It's about years old The problem is it's not draining out the water on it's own at the c .*

**Chapter 8 : Whirlpool Dishwasher GU User Guide | theinnatdunvilla.com**

*From its name alone, you probably expect the Whirlpool Quiet Partner I dishwasher to be the picture of domestic peacefulness. And when it's running, it usually is. But even when there's something amiss -- such as with the heater -- the dishwasher won't set off a alarm.*

**Chapter 9 : Whirlpool quiet partner i : Manual : Page 3**

*Free kitchen appliance user manuals, instructions, and product support information. Find owners guides and pdf support documentation for blenders, coffee makers, juicers and more. Whirlpool Dishwasher GU User Guide | theinnatdunvilla.com*